

Zoot Euro Service Schedule

	300 KM	2,000 KM	4,000 KM	6,000 KM	8,000 KM	10,000 KM	12,000 KM
	or 3 Months	or 12 Months	or 24 Months	or 36 Months	or 48 Months	or 60 Months	or 72 Months
Air Cleaner		I	I	I	I	I	I
Fuel Filter		R	R	R	R	R	R
Spark Plug	I	R	R	R	R	R	R
Ignition Timing		C	C	I	C	C	I
Carby Idle Speed & Mixture	I	I	I	I	I	I	I
Two Stroke Oil Level	I	I	I	I	I	I	I
Throttle Cable Adjustment	I	I	I	I	I	I	I
Transmission Oil	R			R			R
Crank Case Ventilation	I	I	I	I	I	I	I
Variator Rollers				I			I
Drive Belt				I			I
Clutch Shoe Operation				I			I
Bolts and Nut Tension	C	C	C	C	C	C	C
Exhaust System	I			I			I
Fuel Hoses & Inside Tank	I	I	I	I	I	I	I
Battery		C	C	C	C	C	C
Steering & Bearings		I	I	I	I	I	I
Front & Rear Suspension		I	I	I	I	I	I
Tyre Pressures	I	I	I	I	I	I	I
Brake Operation Front & Rear	C	C	C	C	C	C	C
Brake Pads Front		I	I	I	I	I	I
Brake Pads Shoes Rear		I	I	I	I	I	I
Brake Fluid			R			R	
Main & Side Stand Operation	C	C	C	C	C	C	C
Lights	C	C	C	C	C	C	C
Horn	C	C	C	C	C	C	C
Road Test Scooter	Y	Y	Y	Y	Y	Y	Y
Fit Service Sticker	Y	Y	Y	Y	Y	Y	Y

I Inspect
R Replace
C Check Operation